


# Instructions for Setup

## Stage Perfect - Page 2

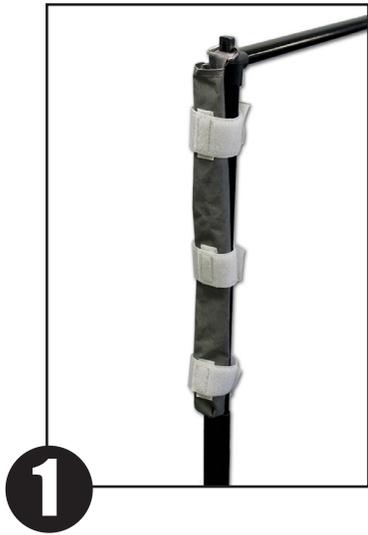

Wrap Velcro around bracket and garment rack as tight as possible.



Small Clips Shown



Yellow circles indicate location of magnetic closures



Yellow circles indicate location of magnetic closures



**Finished!**  
**Hang Costumes!**

# Instructions for Setup


## Stage Perfect - Page 1

### Needed For Assembly:

- Dream Duffel - Any Size
- Hardware - Shown to right
- Stage Perfect Panels  
(Fabric panels - See photos provided for assembly)



**A: Top Connecting Bar**  
**B: Side Support Brackets**  
**C: Side Support Pouches**

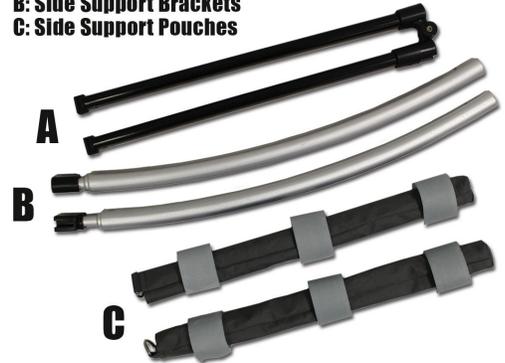

**Start with Dream Duffel rack extended (Works with all size duffels)**

1. Attach **Side Support Pouches (C)** with Velcro loosely around the top of each Dream Duffel telescoping rack and hook D-ring over top button of rack.
2. Insert the silver **Side Support Brackets (B)** into the pouches.  
(Brackets should curve forward).
3. Tighten Velcro straps from pouches around brackets and garment rack as tight as possible to avoid any movement.
4. Pull out the telescoping bars of the Side Support Brackets.
5. Attach **Top Connecting Bar (A)**.
6. Attach BACK Tent Panel with Velcro across the Dream Duffel Top Bar  
Note: Surplus fabric on back panel is normal for small or medium duffels.
- 7a. Un-Velcro the tent SIDE panels and match to the curve of the Side Support Brackets. Velcro to secure.
- b. Velcro FRONT panels to Top Connecting Bar.
- c. Velcro the back of the tent SIDE panels around each of the Dream Duffel telescoping racks.
8. Place tent TOP panel on and secure with small clips on each side (TOP panel optional).
9. Using the magnetic closures, connect the SIDE panels to the BACK panel near the base of the Dream Duffel telescoping racks.
10. Use the magnetic closures on the FRONT to close your changing station for privacy.

**To store: Work backwards with instructions. Roll fabric panels and insert into carrying case. Add pouches, brackets and top bar last.**