

REPLACEMENT INSTRUCTIONS:

Bun Foot

PARTS INCLUDE:

- Bun Foot Set
- (4) 7/8" Silver Bolts
- (4) Small Silver Washers
- (4) Small Metal Nuts

YOU WILL NEED:

- Electric Drill
- 1/4" Drill Bit
- Flathead Screwdriver



INSTRUCTIONS:

1. Locate rivets holding on your current bun foot (*Pic #1 - Exterior Rivets / Pic #2 - Interior Rivets*).
2. From the interior of the duffel, use the 1/4" drill bit to drill ON the surface of the rivet (*Pic #3*), enough to separate the rivet flange (*B-interior*) from the rivet post (*A-exterior*) - See *Pic #5*
3. Once interior flange is separated from the exterior post, you can use the Flathead Screwdriver to pry the post out of the bun foot (*Pic #4*).
4. Remove old Bun Foot, and replace with new Bun Foot, making sure holes are lined up.
5. From the outside of the duffel, insert new bolts (*Pic #6*). -- Use 1/4" drill bit to widen holes if needed.
6. Finally, secure the bolts from the inside with the silver washers and metal nuts (*Pic #7*)




Pic #1 - Exterior Rivets




Pic #2 - Interior Rivets



Pic #3 - Drill out rivet

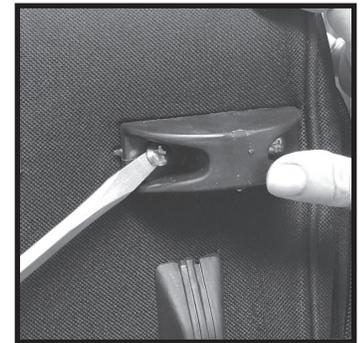


Pic #4 - Remove rivet

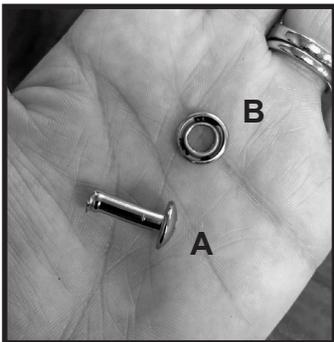

Pic #5 - Remove rivet



Pic #6 - Replace Bolts

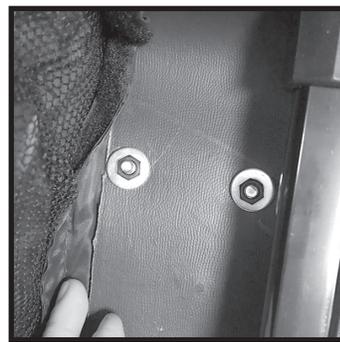

Pic #7 - Secure on Inside

13800 24th Ave. N. Suite #330 | Plymouth, MN 55441

Phone: 1-877-378-1260 | Email: info@dreamduffel.com | Website: www.dreamduffel.com