

# REPLACEMENT INSTRUCTIONS:

## *Bottom Ski*

### PARTS INCLUDE:

- 1 Plastic Bottom Ski
- Ski Hardware
  - (3) 1 1/4" Black Bolts
  - (3) Silver Washers
  - (3) Silver Nuts


### YOU WILL NEED:

- Electric Drill
- 1/4" Drill Bit
- Phillips Head Screwdriver Bit



### INSTRUCTIONS:

1. Pull back Velcro lining inside your Dream Duffel to expose bottom ski rivets (*Picture #1*).
2. Use 1/4" drill bit to drill onto the surface of the rivet (*Picture #2*).
3. (*Picture #3*) Drill onto the rivet enough to separate the flange (A-Interior) from the post (B-Exterior). Do this to all three rivets and then pull away ski and rivet posts from exterior of duffel.
4. Once you've removed the old ski, grab the new one and slide either end into the opening of the top of the plastic wheel casing (*Picture #4*).
5. Be sure all holes are lined up, and push new bolts through holes from the outside of the duffel.
6. Secure bolts with silver washers and nuts on the interior of the duffel (*Picture #5*).

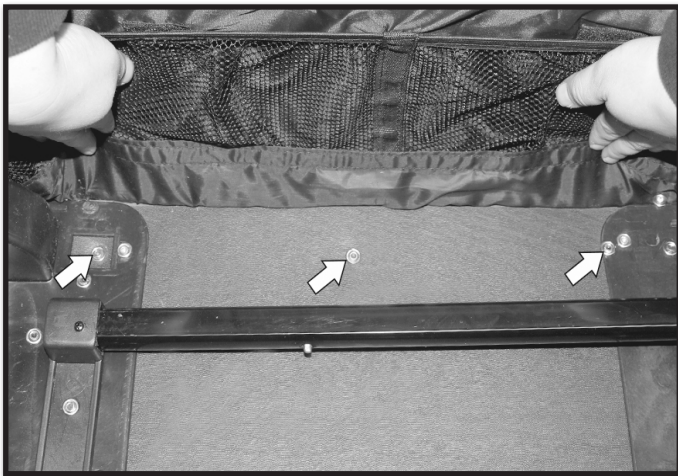


**Picture #1**

Arrows showing rivets for this particular duffel.  
Be sure you're drilling out correct rivets for your duffel.




**Picture #2**

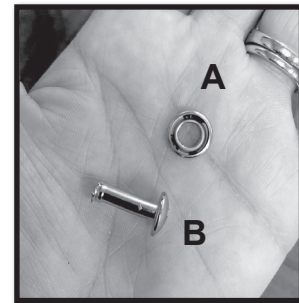

**Picture #3**



**Picture #4**

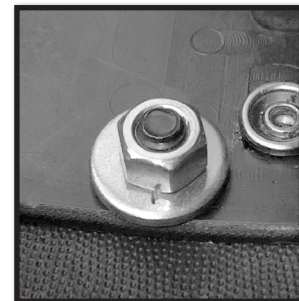

**Picture #5**

13800 24th Ave. N. Suite #330 | Plymouth, MN 55441

Phone: 1-877-378-1260 | Email: [info@dreamduffel.com](mailto:info@dreamduffel.com) | Website: [www.dreamduffel.com](http://www.dreamduffel.com)